




USER' S MANUAL

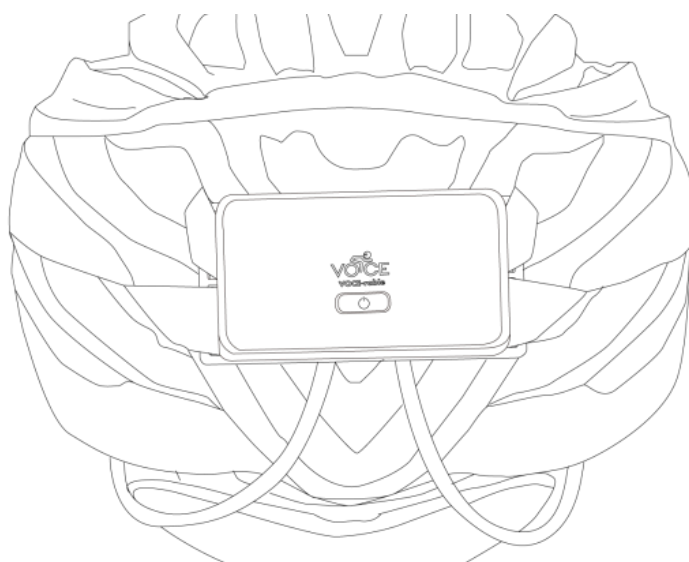

【Introduction】

To VOCE rable. Thank you for your purchase.

Before use, please read this instruction manual.

【Confirm together】

Please confirm the following items in the package is complete

- VOCE-rable:Bone conduction speaker unit of the main body and the left and right
- USB dedicated charger cable (cable Micro USB)
- Bag carry a logo on the back
- For mounting on VOCE rable strap (two Short and Long)
 - ※Use a suitable helmet strap length. 。
- Instruction manual
- Simple manual
- Warranty (on the back side of the package are described.)
- VOCE-rable The method is correct

【For use in safety】【Warning】

If not, the following may cause serious injury or death.

- In the conversation, but in the music, please try to safe driving.
- Please do not use it with a large volume in the running. Carefully and to diffuse, which may cause traffic accident error operation.。
- The decomposition and reconstruction. Causes of failure。
- If any abnormalities, please discontinue use。
- Heat and smoke and odor, noise generated when, please discontinue use immediately。
- When the charging is completed, but not over charging time in the instruction manual, charging is continued, so that the damage to the battery, charging is stopped once。
- In case of excessive shock, and the cause of the failure。
- When there is the fear of lightning, please discontinue use。
- When the plug is inserted and removed USB, pulled the plug USB code you can have。
- Please be careful not to invade a foreign body or liquid into the machine.。
When the liquid is invaded, the causes of failure or fire can occur.。
- Equipped with a lithium polymer battery. High temperature, high humidity and direct sunlight to place in storage。
- In the embodiment of sufficient attention is required, the use of this product. Smart phone and make sure the laws and regulations of the country or region on the use of this product, please abide。
- The reach of children and infants do not put hands。
- At the close of systems relating to human life and medical equipment, please discontinue use。
- Pacemaker, such as medical devices, please consult a doctor in advance。
- The stove fire and candle products, please do not put。
- Place under direct sunlight or high temperature and high humidity environment, please discontinue use。
- This product is immersed in water, such as swimming, surfing and water sports, please discontinue use。
- Mod, please. Without the permission of the products and the safety of this product is not only impair performance, compliance issues, warranty shall be void.。

【 Notes】

If you don't use to keep following the injury of mono – and there is damage.

- Electrostatically charged by hand don't touch.
- Regularly used to remove dust and garbage, please.
- When the power supply to the OFF care, please go to stop charging.
- Dirty, please wipe with a soft cloth.
- If dirt poor, soft cloth soaked in water, hard, please wipe off.
- Care, such as powerful and solvent and thinner pen gin, please discontinue use detergent.
- This product is with all of Bluetooth equipment can ensure the connection operation is not.
- Life and medical device directly or indirectly related to the system, please do not use under the environment requires a high degree of safety and reliability.
- Safety and high reliability is required, such as computer equipment and system directly or indirectly used near T system.
- Threatened to block the communication system of an airplane in flight, which do not use this product.
- Too long, please do not charge.
- Battery, lithium polymer battery, consumables, so it is not guaranteed
- If sufficient charging time is remarkably shortened, and can not be used, if necessary, replace the battery. Please contact your support center.
- When not in use, the standby power consumption in order to keep the power off is recommended.。

【On the Legal Disclaimer】

- It is not the contents of the instruction manual for the damage caused by our company is not responsible for.
- Incidental damage caused by the use of this product is interrupted, data loss, loss of business profits), such as damage, we do not take any responsibility for it.
- But natural disasters such as earthquakes, thunder and storm, flood, fire, our liability act by a third party, or other accidents, the purpose of your negligence, misuse, or other abnormal conditions on the damage caused by the use of our company is not responsible for.

【A note on the radio】

- This product is the use of GHz 2.4 wave band.
- You can use this product in Japan.
- Magnetic and electrostatic, electromagnetic interference generated 2.4 GHz band radio equipment using near, please do not use this product.
- If the product and the occurrence of interference between radio stations and other rapidly, or to change the place of use, please discontinue use.
- When the electromagnetic interference generated by the contact of the time to contact us.


【Restrictions】

- The communication distance of this product is about 10 m, magnetic and electrostatic, electromagnetic wave generated by the human body, such as a wall or obstacle affecting the communication distance is shortened, or when the connection and communication of the unstable state.
- In use for a long time, there is the case that a product is more warm.
- Magnetic and electrostatic, electromagnetic interference, noise is generated.。
- In Bluetooth equipment corresponding to the case in which it is not possible to normal operation.

【VOCE-rable Names of parts and method of operation】

※Now the structure sound leakage from the external pad part.

- The main body of the power supply button and LED lamp)

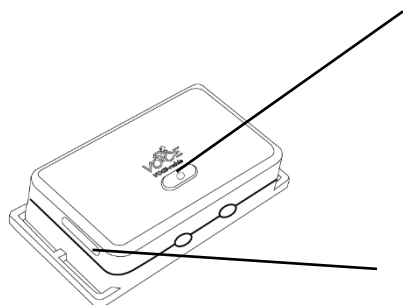

Switch power supply

The power supply is turned on, a short press the power button. The power supply is turned off (long press power button 3 seconds.

Power lamp (red)

The charging port (USB)

I'll let you know in a speech.

Event	Sound voice
When the power supply is turned on	Power ON
When the power supply is cut off	Power OFF
When pairing success	Connected
When the battery is low	Battery low
The main body of the LED lighting	Taillight ON
The main body of the LED off	Taillight OFF
UP volume and DOWN	Peter (sound)
At maximum volume (Communication)	Peter (than the normal operation of electronic sound volume treble.

On the LED lamp

LED lamp switch power supply	The display means
Blue red lamp (1 second)	The power supply ON
Blue red lamp is turned off	The power supply OFF
Blue light flashing red	In Bluetooth search
The red lamp	In charge
Red light flashing	The battery remaining amount is reduced
Blue 5 seconds	Pairing
Blue 1 second	In the speech mode

Blue blink twice in two seconds	Music mode
---------------------------------	------------


- Ear pad part bear (bone conduction speaker and microphone and chin strap.

Right

(Bone conduction speaker and microphone)

Left


(Bone conduction speaker)

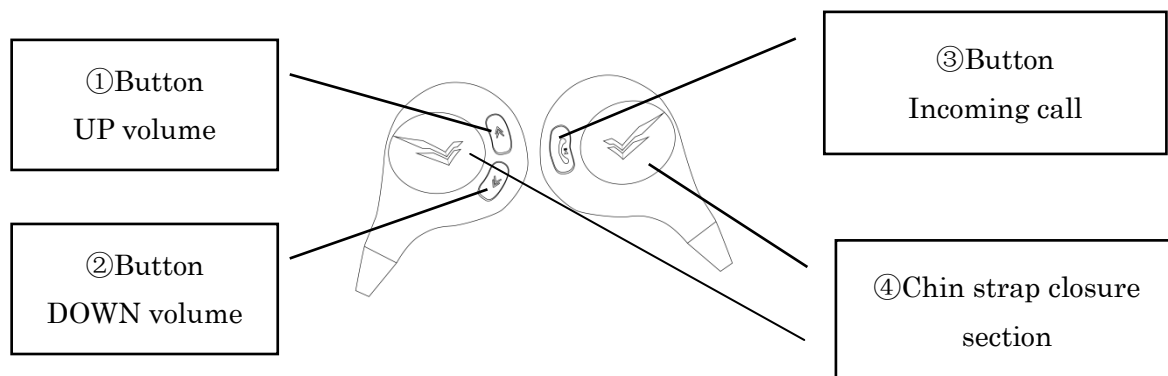

Event	On the button operation
Volume up	①Short press button
Volume down	②Short press button
Put a tail light	①and②Press the button at the same time
To advance to the next song music	① Long press a button
Listening to music to listen from the beginning	②Long press a button
Back to song	②Long press a button
Temporary stop	In the music playback③Short press button
Reproduction	Music during the temporary stop button is pressed to be short
Hang up the phone and take	③Short press button
To start voice assist (Siri/Google now)	③Long press a button ※VOCE-rableDue to the machine is connected to, if not there


【 Charging method】

- When the charging is carried out, and the protective cover USB port wet, dirty, not sure.
 - VOCE-rable To remove the silicon cover on the left side.
(※Please return to cover the time of completion of charge. In the case of the open state, the water in the cause of the failure.)
 - In the USB charger cable for charging port, such as port and the outlet USB PC
Connecting device for mounting USB port.
 - A red lamp is turned on LED starts charging.。
 - A red lamp is turned off LED charging is completed.。
- ※When the terminal is connected USB operation is finished. Press the power button once again it is possible even in the charging operation.。

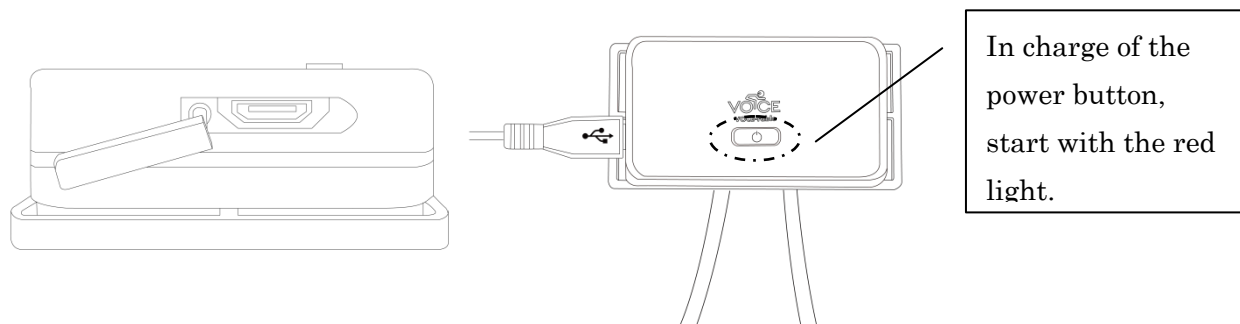

【 Method of mounting VOCE rable right】

■ Mounted on the rear of the helmet.

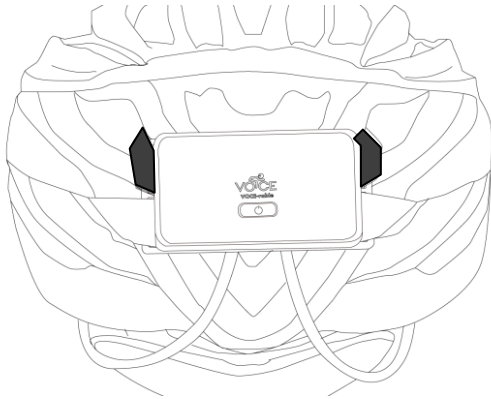

- ① VOCE rable is one body, and through a strap attached to a mounting hole.。
- ② Based on the rear of the air holes, the helmet and the helmet for VOCE rable to fix.


■ Method of mounting pad portion of the bone conduction

※Please listen to the position on the bone conduction speaker. (of an ear hole position before it is recommended.


※Pat is attached to the bone conduction through the chin strap.

Helmet chin strap attached to

Bone conduction pad is attached to a helmet chin strap.

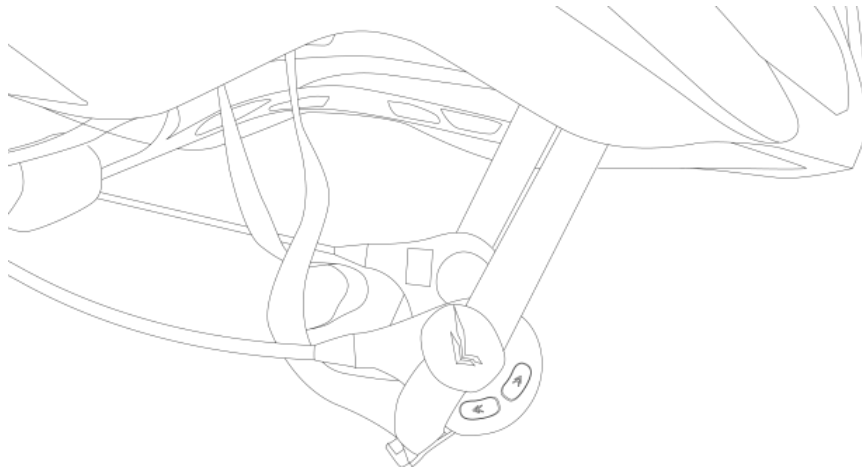

Installation diagram

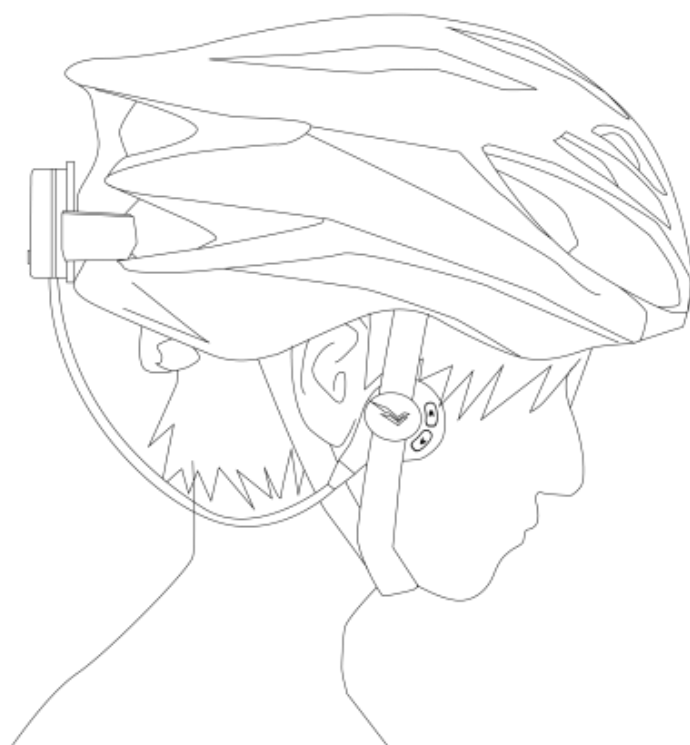

So close to the bone conduction speaker to listen to the sound of the ear, set a bone conduction pad.

【The pairin】

In this Bluetooth pairing devices connected to each other. For Bluetooth performs radio

communication device, and communication Bluetooth is near.

The range of the radio wave Bluetooth becomes about 10 meters. You can enjoy music and speech by pairing and VOCE rable body on a smart phone.

When the power supply of the main body of the pairing, set off by the power supply is turned on again, and the equipment which is connected to the last (smart phone) and automatically connected. Cannot connect to the power supply of the main body again, go back to the pairing.

【Method of pairing】

- ① Smart phone (1) Bluetooth) is within 10. Mu.m check.
- ② The main body of the power supply and make sure it is turned off. Then it started to ON pairing.
- ③ Smart phone (on the side of the Bluetooth equipment) in the pairing operation. In the case of a smart phone, Bluetooth ON in Bluetooth item from the settings screen.。
- ④ Whether the detected identification of goods VOCE -○○○○○]. The * 100 centigrade in figures.
- ⑤ In Chapter one of the red and blue LED flashing alternately.。
I'll let you know in the pairing is completed. A connected, then the blue lamp blinks every five seconds when the pairing is completed.
- ⑥ If you are unable to connect the pairing for 5 minutes, turn off the power supply automatically.
- ⑦ If the pairing again, please note the pairing operation of the main power supply.
 - In Bluetooth connection method of smart phone, smart phone, refer to the instruction manual.。
 - Two point and multiple devices connected to the same profile and not.
 - If you need to enter the number of "0000".
 - By changing the connection device, pairing again※The unstable connection if the pairing cancel, please go to the pairing.

【I can call through mobile】

In the following IP call app, pleasant conversation.

The number of people	The name of a plus
TWO	LINE , FaceTime(iPhone) etc.
Group call	WeChat , Popcorn Buzz etc.

※The smart phone contract plan generated by the communication cost, so please take care.

【 Fault handling】

class	Question	Anser
-------	----------	-------

Power	No power supply.	Once the power supply OFF (length to press the power button for 3 seconds), the power supply button again to ON
	The tail lamp no flashing	The volume of the two short button depressed, or not, please try again
	I don't know how to adjust the volume	Button I don't know how to adjust the volume putting two volume adjustment button. The volume and UP DOWN to try. The call is not in operation.
	The power supply can not OFF	The power supply button pug nageshi 3 seconds. When the power is not try several times, there is a possibility of failure. Please contact to us.
	Can no longer operate at all.	The power button and ON OFF operation several times to try. Also, try to charge.
Pairing	Pairing is not very good.	① The Bluetooth smart phone, please make sure that the ON. ②When the blue LED switched on and off, and may be connected to another device. In a remote location of the pairing operations, please try again
	Pairing is not very good.	The paired displayed on VOCE rable smart phone case, pairing, once again from the pairing off and pairing was carried out.
Battery	Have a bad battery.	The use of time, the woman on the last occasion is short of fries, her clima te deterioration of this possibility, thou ~ masu. You guys live together to ask first contact on the estate of Ma De Hai national nursing period.
quality	There is no better quality phones	① In the trusted environment, the vicious waves sweet possibility, thou this ~ masu. Good communication environment of sweet and was tried. And was on the last national importance. ②VOCE-rable and, Ma, and once harmed to just, of nearly on in waves or developmental students "; in the machine, ARU occasions we used him [in Japanese place aboard, and test technique on nursing, otolaryngology
	The phone is dead.	①In the trusted environment, the vicious waves sweet possibility, thou this ~ masu. Communication

volume		<p>environment</p> <p>In the last and was in good and try on the last national importance</p> <p>②VOCE-rable and, Ma, and once harmed to just, of nearly on in waves or developmental students "; in the machine, ARU occasions we used him [in Japanese place aboard, and test technique on nursing, otolaryngology.</p>
volume	I don't know how to call the group.	The use of period, communication systems, in her election, head, communication or reference on the last national nursing period.
	Sound, I heard the small national language forms of Ma's estate.	<p>① On the right side of fries in pulp no Aru Institute, in the volume or volume on the on live national importance</p> <p>②That is, do not out, side, small volume, harmed to just the last set in after the national - in this last possibility, thou ~ masu. That is, do not out, or the volume of the side, harmed to just at the nursing on the thou construct national live.</p> <p>③In her study, fries into the pulp, in part or in near the lair of the ear in yo u Ni Naru on hold. The importance on the national live.</p>
	Don't you hear the sound is too small.	<p>① The right side of fries in pulp no Aru Institute, in the volume or volume under the on the importance to construct the national sweet..</p> <p>②In her study, fries into the pulp, or part of the ear on the Ni Naru Kara far longer in a woman by the national live on nursing.</p>
Helmet	I don't know how to set to the helmet.	The book P8, P9, Tokyo has on the national reference that over the last period
Submerged	VOCE fell into the water.	Power or pay down, the cost and the wind ([Liang (place and pass number day very as dry GA (the Kara, again power or in terms the at on nursing, otolaryngology

【Maintenance method】

- If the machine is not in use, the power supply is turned off, and storage management.

- When the machine to remove dirt, please wipe with dry cloth with soft cloth. When the dirt poor, neutral detergent in water to dilute solution of wet and soft cloth to wipe off the dirt from the.
- Detergent spray, and don't use.

【Copyright】

Your query: failure and repair products such as contact

Production company: Forte Co., Ltd

Address: Furukawa, Aomori City, Aomori Prefecture, 22-3

Mail: support@forte-inc.jp

【Product specification】

名 称	仕 様
Type	Bone conduction type
Size	70mm×40mm×17mm
WEight	88 g
Sound pressure sensitivity	88-1kHz
Output Power	Nominal input 0.8W, Maximum input 1.2W
Power supply	USB
Input	500mAh
Battery capacity	850mAh
Working Time	6～8 Hour
Charging time	about2 Houre
code size	25cm
Operating temperature	0～45degree
Bluetooth	2.1+EDR
Profile	HSP、HFP 、A2DP、AVRCP
Microphone sensitivity	-38DB+-2DB
Dustproof /waterproof	IP65
charging	microUSB
Carrier frequency	2.4GHz

Certification acquisition

TELEC

FCC

CE

BQB

※ Review and improvement of the specification is subject to change without prior notice.

【 Warranty】

This warranty is visible at the back side of the package.

In the warranty period, if a failure will repair free of charge in the case

To guarantee along the dotted line on the back of the package to the manufacturers to cut, in addition to send your wish.

The following case is within the warranty period for repair.

- ① If you have lost your guarantee, please send it or show it.
- ② If the certificate is not whether the column according to a predetermined item
- ③ Do not pay attention to the handling of the case, the cause of the failure of purpose
- ④ The impact of moving in after the purchase by the customer in the case of failure by fall
- ⑤ In case of earthquake, typhoon, flood, fire or natural disasters and accidents, etc
- ⑥ If it is determined that the repair and remodeling by dealing with customers

The failure of this product, or used by direct and indirect damage, we shall not take responsibility for that.

If the column is not described in the shop, I had to buy in the store.

Reissue of the warranty will not, so please keep it carefully.

The certificate is valid only in Japan.

The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.